


Design Wall Instructions for 2 Design Walls

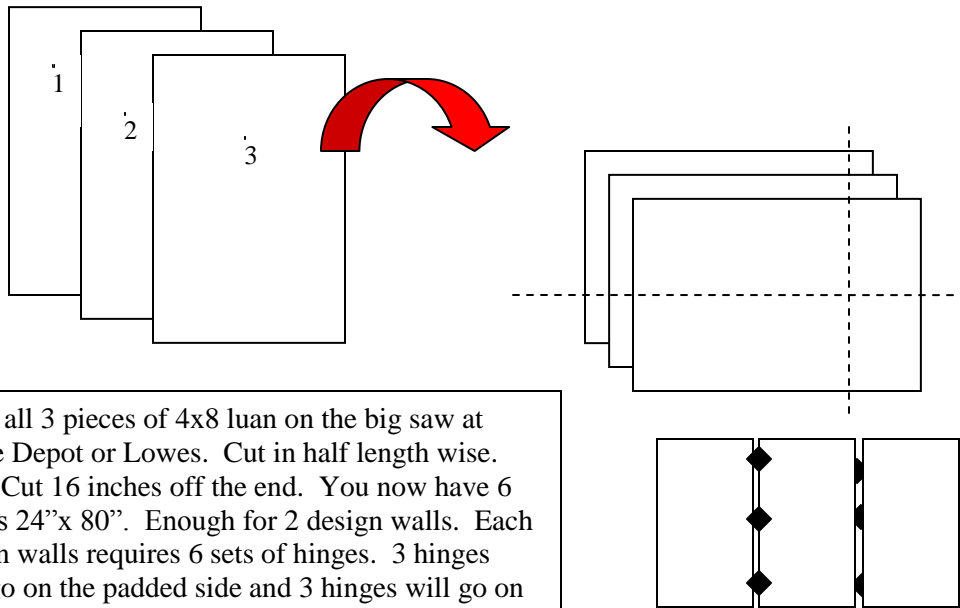

Place all 3 pieces of 4x8 luan on the big saw at Home Depot or Lowes. Cut in half length wise. Then Cut 16 inches off the end. You now have 6 panels 24"x 80". Enough for 2 design walls. Each design walls requires 6 sets of hinges. 3 hinges will go on the padded side and 3 hinges will go on the unpadded side

Drill holes for the nuts & bolts & then pad them with left over batting pieces. Hancock's has drapery flannel lining that is 55 or 60 inches wide for about \$5 a yard. It takes seven yards of fabric. Seven yards split down the middle will cover two design walls. We just snipped the end with scissors and ripped it to split it in half. You pad and staple the fabric on the panels, then hinge them together. It takes 6 small hinges. Nuts and bolts work better than screws that might poke through the wood. When finished the design wall fits perfectly behind a door.